SUPERTOOL

JIB CRANE (Pillar-fixed/-Welded type)


JBC 1520H ~ 4840H

Universal-joint type

Boring bolts holes through the pillar of the H-shaped steel in the building and fixing the flange for assembly and installation.

Feature

Even in the building where the ceiling is comparatively low, the space can be effectively used, since there is no pulling from above. It is easy to assemble and disassemble the arms.

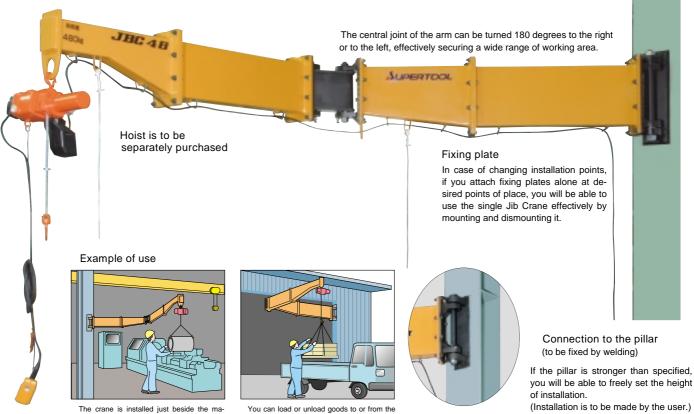

truck by installing the crane at the entrance of the factory or the warehouse. You can use the crane for lifting and moving

the welding machine, tools, etc

(Installation is to be made by the user.)

Т

10

(Unit:mm)


h

15

15


The crane is installed just beside the machine to attach or detach the work material Install the crane on the pillar of the building to do auxiliary work under the overhead traveling crane

Dimensions of the fixing plate

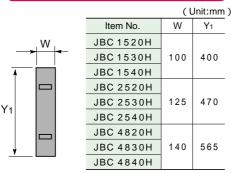

SPECIFICATIONS • DIMENSIONS TABLE

(- · · · · · · · · · · · · · · · · · ·				
Item No.	Rated capacity (kg)	Arm length S	Weight (kg)	Remarks
JBC 1520H	150	2,034	57	
JBC 1530H		3,034	71	
JBC 1540H		4,034	91	
JBC 2520H	250	2,024	90	
JBC 2530H		3,024	132	
JBC 2540H		4,024	144	
JBC 4820H	480	2,022	173	
JBC 4830H		3,022	226	
JBC 4840H		4,022	267	

 

(Unit:mm)

14 250kg 480kg 82 19 16

А

60

60

Apart from the indicated specifications, we will provide custom-ordered hooks according to the user's needs.

Equipment with a load sensor

Dimensions of the hook for attaching a hoist

150kg

Model	Item No.	New series
Welding Type	JBC 1520HS	
	JBC 1530HS	
	JBC 1540HS	
	JBC 2520HS	
	JBC 2530HS	
	JBC 2540HS	
	JBC 4820HS	
	JBC 4830HS	
	JBC 4840HS	

CRANES

You will be separately charged for freight and installation.