

■ REPLACEMENT PARTS AND ASSEMBLIES

Part No.	Part Name		Assembly No. (Set No.)	Q'ty(pc)
	Part Name	Assembly Name		
1	Screw	Screw	SUCR	1
2	Handle			1
3	Sleeve	Sleeve	SUCB	1
4	Hex. Hole Head Screw			1
5	Circular Cam	Cam	SUT	1
6	Stopper Pin			2
7	Cam Holder			1
8	Spring			1
9	Steel Ball			1
10	Guide Pin			1
11	Collar			1
12	Disc Spring			5
13	Hex. Hole Head Bolt			1
14	Spring Washer			1
15	Shackle	Shackle	SUS	1
16	Shaft			1
17	Plate			1
18	Connecting Pin			1
19	Spring Pin			1

1)When ordering, specify the rated capacity (ton) of item No. with “S”.

(For instance, the screw for SUC1S is SUCRIS.)

2)Periodic lubrication is required at the sliding section of Cam Holder and Screw.

