## ■REPLACEMENT PARTS AND ASSEMBLIES

Part No.	Part Name and Assembly Name	Part No./Assembly No. (Set No.)	Q'ty(pc)
Shackle		SCH	
5	Shackle	SCCH	1
6	Bolt for Shackle	SCCN	1
11	Cotter Pin		1
12	*Nut for Shackle		1
3	Cam	SCCT	1 set
10	Stop Ring		
Pad		SCP	
4	Pad	SCCP	1
8	Hex. Hole Head Bolt	SCCV	1
9	Nylon Nut		1
Screw		SCR	
2	Screw	SCCR	1
7	Handle	SCCU	1

1) When ordering, specify the rated capacity (ton) of item No. (with "W" at the end in case of wide type)

(Example : Screw for SCC3 is SCCR3) (Example : Cam for SCC1W is SCCT1W)

2) Handle of SCC0.5 and SCC0.3W is ordered as an assembly, and the Assembly No. is SCR0.5 (0.3W).

3) Periodic lubrication is required at cam holder and a sliding portion of Cam and Screw (spherical portion).

