

■ REPLACEMENT PARTS AND ASSEMBLIES

Part No.	Part Name	Item No.	Set Q'ty(pc)
Shackle Assembly		SCH	
5	Shackle	SCCH	1
6	Support Bolt (for Shackle)	SCCN	1
12	* Nut (for Shackle)		1
11	Cotter Pin (for Support Bolt)		1
Screw		SCR	
2	Screw	SCCR	1
7	Handle	SCCU	1
Cam			
3	Cam	SCCT	1 set
10	Stop Ring		
Pad Assembly		SCP	
4	Pad	SCCP	1
8	Bolt (for Pad)	SCCV	1
9	Nylon Nut (for Pad)		1

- 1) When ordering, specify the rated capacity (ton) of item No. (with "W" or "L")
(Example : Screw for SCC3 is SCCR3.)
(Example : Cam for SCC1W is SCCT1W.)
- 2) Handle of SCC0.5, SCC0.5L and SCC0.3W is ordered as an assembly, and the item No. is SCR0.5 (0.5L / 0.3W).
- 3) Periodic lubrication is required at a sliding portion of the cam and screw (spherical portion).

