

■ REPLACEMENT PARTS AND ASSEMBLIES

PARTS NO.	ITEM NAME			QTY.
	SET	DETAIL	ITEM No.	
1	SCREW	SCREW	SWCR	1
2	SLEEVE	SLEEVE	SWCB	1
3		HEX. HOLE HEAD SCREW		1
4	CAM	CIRCULAR CAM	SWT	1
5		STOPPER PIN		2
6		CAM HOLDER		1
7		SPRING		1
8		STEEL BALL		1
9		GUIDE PIN		1
10		COLLAR		1
11		DISC SPRING		5
12		HEX. SOCKET HEAD SCREW		1
13		SPRING WASHER		1

Attention

- 1) When ordering, specify the CAPA (TON) with ITEM NO.
(For instance, the screw for SWC1S is SWCR1S)
- 2) Periodic lubrication is regularly required on to cam holder and screw.

