


■ REPLACEMENT PARTS AND ASSEMBLIES

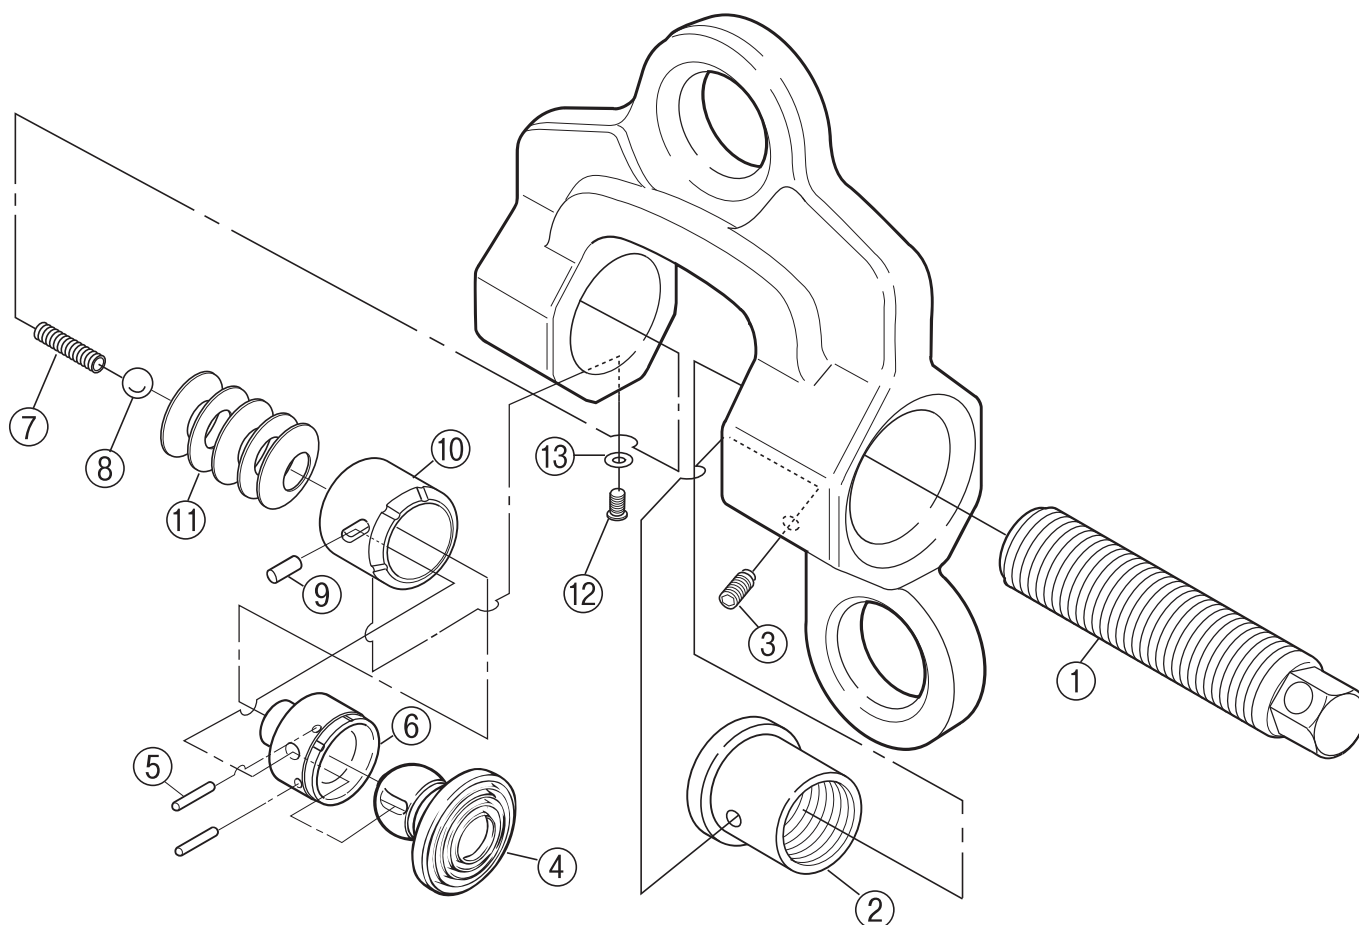

Part No.	Part Name	Item No.	Set Q'ty
1	Screw Assembly	SWCR	1
Sleeve Assembly		SWCB	
2	Sleeve		1
3	Hex. Hole Head Screw		1
Cam Assembly		SWT	
4	Circular Cam		1
6	Cam Holder		1
5	Stopper Pin		2
10	Collar		1
9	Guide Pin		1
8	Steel Ball		1
7	Spring		1
11	Disc Spring		5
13	Spring Washer		1
12	Hex. Hole Head Bolt		1

Attention:

- 1) When ordering, specify the rated capacity (ton) of item No. with "S".
(For instance, the screw for SWC1S is SWCR1S.)
- 2) Periodic lubrication is required at cam holder and screw.