

■ REPLACEMENT PARTS AND ASSEMBLIES

Part No.	Part Name		Item No.	Set Q'ty
	Set	Detail		
1	Screw Assembly	Screw	SJCR	1
2		Handle		1
3	Sleeve Assembly	Sleeve	SJCB	1
4		Hex. Hole Head Screw		1
5	Cam Assembly	Circular Cam	SJT	1
6		Stopper Pin		2
7		Cam Holder		1
8		Spring		1
9		Steel Ball		1
10		Guide Pin		1
11		Collar		1
12		Disc Spring		5
13		Hex. Hole Head Bolt		1
14		Spring Washer		1

Attention :

- 1) When ordering, specify the rated capacity (ton) of item No. and "S".
(For instance, the screw for SJC1S is SJCR1S.)
- 2) Periodic lubrication is regularly required at the cam holder and screw.

