

■ REPLACEMENT PARTS AND ASSEMBLIES

Part No.	Part Name	Item No.	Set Q'ty
1	Screw	SWCR	1
Cam Assembly		SWT	
2	Circular Cam		1
4	Cam Holder		1
3	Stopper Pin		2
7	Steel Ball		1
6	Spring		1
5	Retaining Ring		1

Attention:

1) When ordering, specify the rated capacity (ton) of item No. with "N".

(For instance, the screw for SWC1N is SWCR1N.)

2) Periodic lubrication is required at cam holder and screw.

