

■ REPLACEMENT PARTS AND ASSEMBLIES

Part No.	Part Name	Item No.	Set Q' ty
2	Cam	HPCT	1
4	Support bolt and nut (for Cam)	HPCK	
	Support bolt (for Cam)		1
	Support nut (for Cam)		1
	Spring pin (for Support bolt)		1
3	Spring	HPCS	1

1) When ordering, specify the rated capacity (ton) of item No. and N.

(Example: Cam for HPC2N is HPCT2N.)

2) Periodic lubrication is required at working portion of the support bolt for cam and cam.

