


■ REPLACEMENT PARTS AND ASSEMBLIES

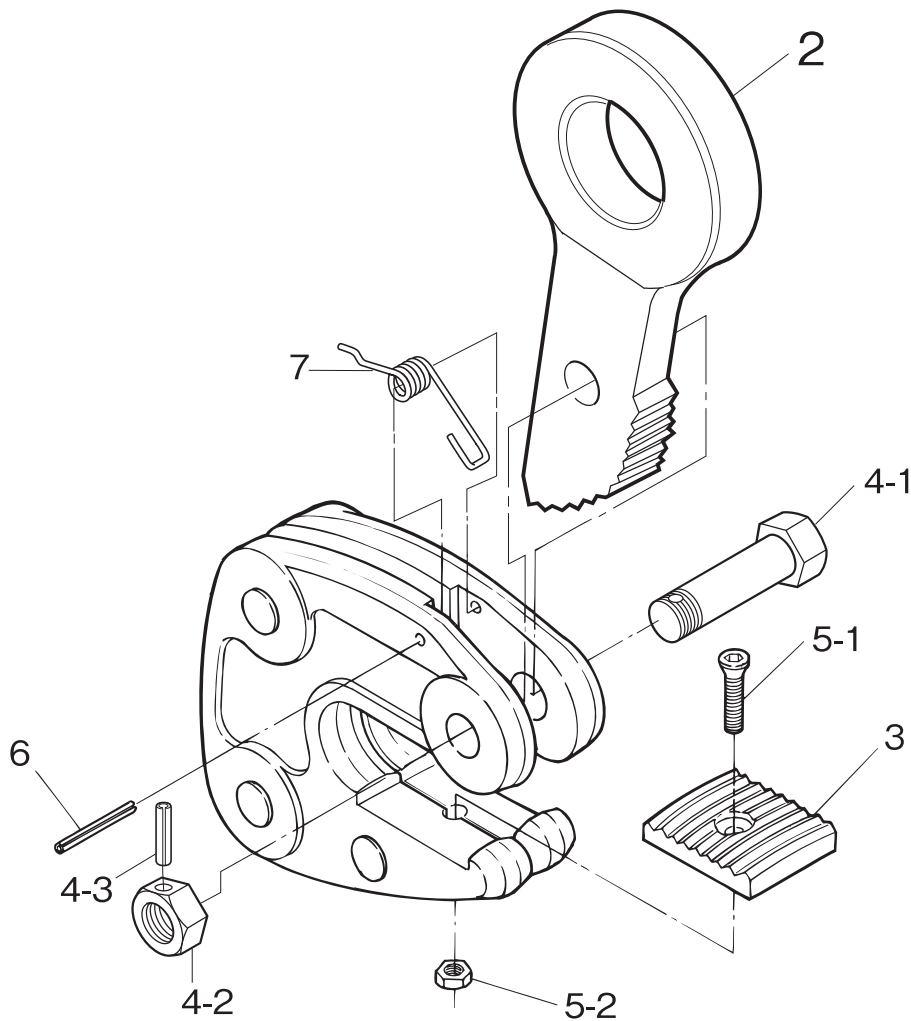

Part No.	Part Name	Item No.	Set Q'ty
2	Cam Assembly	HLCT	1
	Support Bolt/Nut(for Cam)	HLK	
4-1	Support Bolt(for Cam)	HLCK	1
4-2	Nut(for Cam)		1
4-3	Spring Pin(for Support Bolt)	HLCC	1

※2 pcs only for HLC0.5S

Attention:

- 1) When ordering, specify the rated capacity (ton) of Item No. and S or W.
(For instance, the cam assembly for HLC2S is HLCT2S. The pad Assembly for HLC1W is HLA1W.)
- 2) Periodic lubrication is required at the pin and the sliding section.
(Please remove oil from the pad and cam teeth.)

Part No.	Part Name	Item No.	Set Q'ty
	Pad Assembly	HLA	
3	Pad	HLCA	1
5-1	Bolt(for Pad)	HLCN	1
5-2	Nylon Nut(for Pad)		1
	Spring	HLS	
7	Spring	HLCS	1
6	Spring Pin(for Spring)	HLCQ	※1 (2)