
REPLACEMENT PARTS AND ASSEMBLIES — SVC 0.5H/HN~5H SVC 1WH/WHN~5WH (Wide Type)

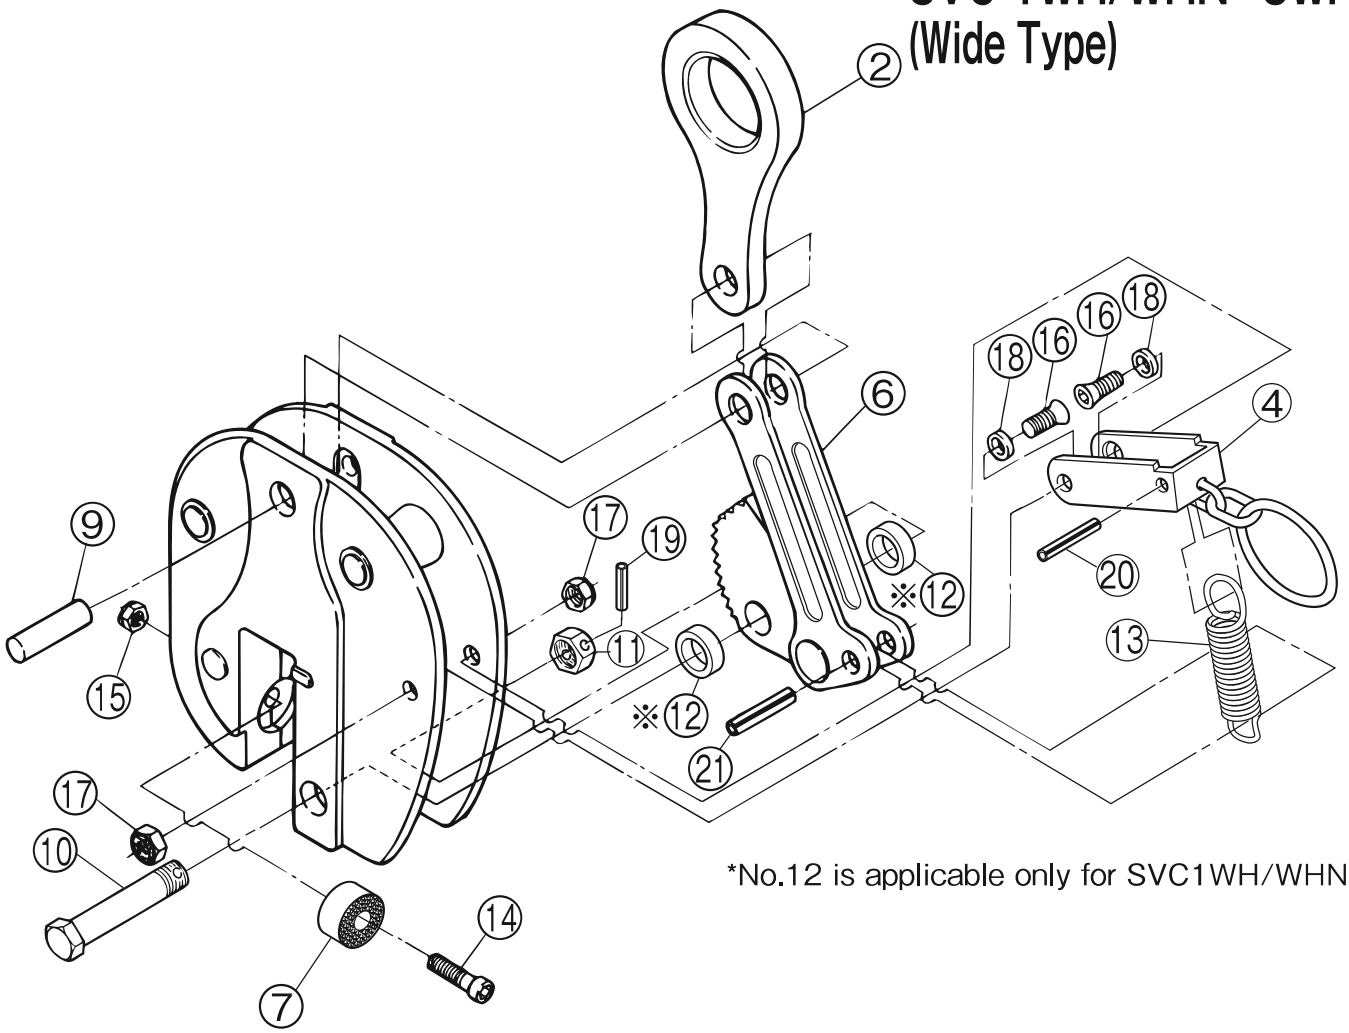


*No.12 is applicable only for SVC1WH/WHN.

Part No.	Part Name	Item No.	Set Q'ty
Shackle Assembly		SVH	
2	Shackle	SVCH	1
9	Shackle Support Pin	SVCY	1
Cam Assembly		SVT	
6	Cam/Link	SVCT	1
21	Spring Pin (for Link)	SVCU	1
Cam Support Pin Assembly		SVK	
10	Support Bolt (for Cam)	SVCK	1
11	Support Nut (for Cam)		1
19	Spring Pin (for Support Bolt)	SVCO	1
※12	Collar (for Cam)	SVCR	2

Part No.	Part Name	Item No.	Set Q'ty
Pad Assembly		SVP	
7	Pad	SVCP	1
14	Bolt (for Pad)	SVCV	1
15	Nylon Nut (for Pad)		1
Lock Handle Assembly		SVG	
4	Lock Handle	SVCG	1
16	Hex Hole Disc Bolt (for Lock Handle)	SVCF	2
17	Nut (for Lock Handle)		2
18	Collar (for Lock Handle)	SVCZ	2
20	Spring Pin (for Lock Handle)	SVCQ	1
13	Spring	SVCS	1

1) When ordering, specify the rated capacity (ton) of item No. and H/HN or WH/WHN.
(Example: Cam Assembly for SVC3H is SVT3H. Cam Assembly for SVC3WH is SVT3WH.)
2) Periodic lubrication is required at pin and working portion. (Take off oil from the teeth of pad and cam.)

REPLACEMENT PARTS AND ASSEMBLIES — SVC 7H,10H SVC 7WH,10WH (Wide Type)

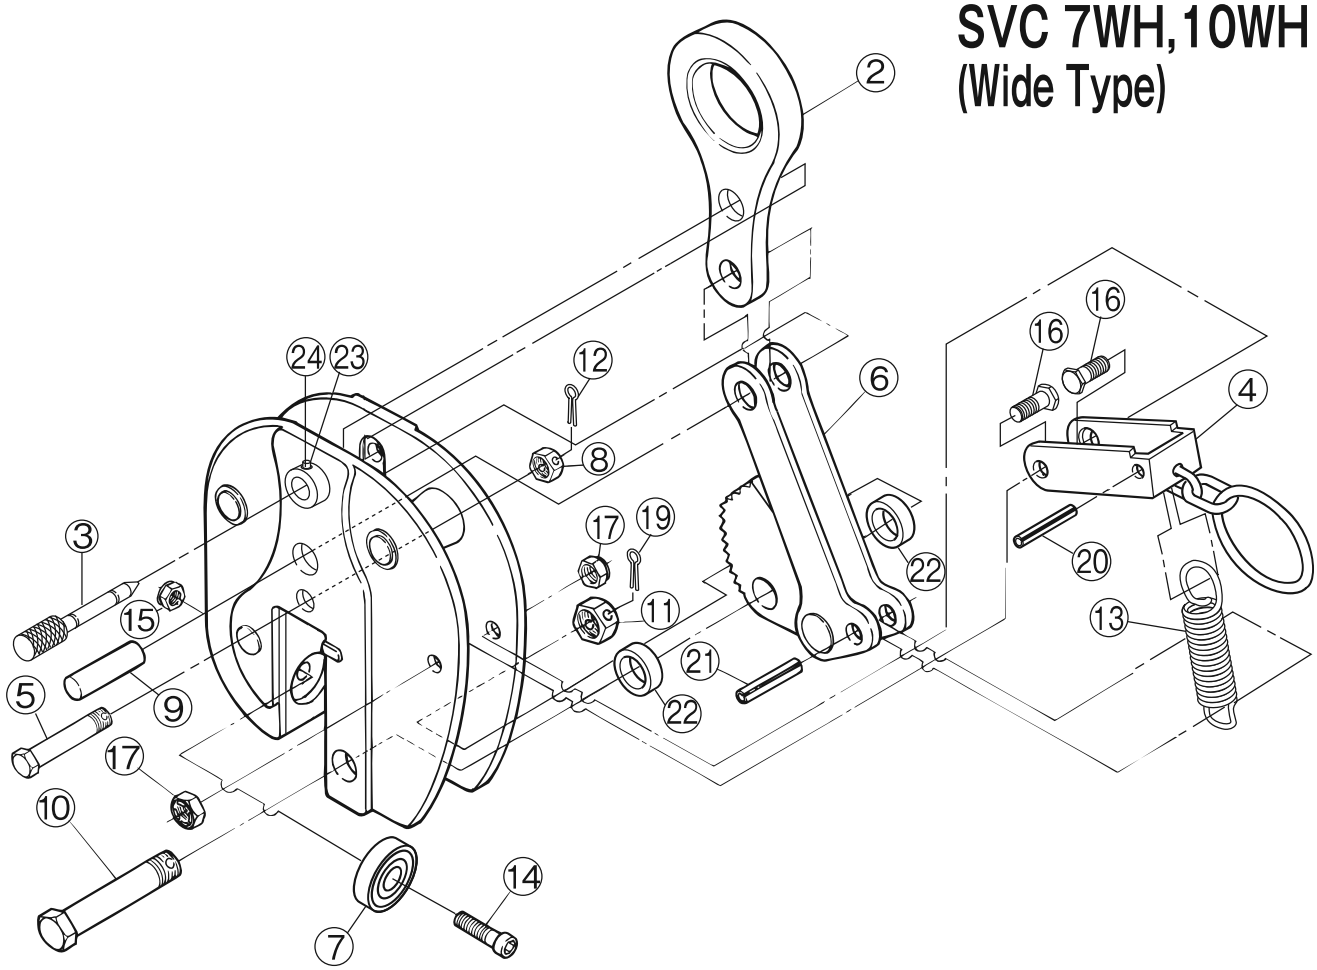

Part No.	Part Name	Item No.	Set Q'ty
Shackle Assembly		SVH	
2	Shackle	SVCH	1
9	Shackle Support Pin	SVCY	1
Retaining Pin Assembly		SVN	
5	Retaining Bolt	SVCN	1
8	Retaining Nut		1
12	Split Pin (for retaining)	SVCA	1
Cam Assembly		SVT	
6	Cam/Link	SVCT	1
21	Spring Pin (for Link)	SVCU	1
Cam Support Pin Assembly		SVK	
10	Support Bolt (for Cam)	SVCK	1
11	Support Nut (for Cam)		1
19	Split Pin (for Support Bolt)	SVCW	1
22	Collar (for Cam)	SVCR	2

Part No.	Part Name	Item No.	Set Q'ty
Pad Assembly		SVP	
7	Pad	SVCP	1
14	Bolt (for Pad)	SVCV	1
15	Nylon Nut (for Pad)		1
Lock Handle Assembly		SVG	
4	Lock Handle	SVCG	1
16	Hex Hole Disc Bolt (for Lock Handle)	SVCF	2
17	Nut (for Lock Handle)		2
20	Spring Pin (for Lock Handle)	SVCQ	1
13	Spring	SVCS	1
Open Lock Assembly		SVB	
3	Open Lock Pin	SVCB	1
23	Plunger Bolt	SVCC	2
24	Plunger Nut		2

1) When ordering, specify the rated capacity (ton) of item No. and H or WH.
(Example: Cam Assembly for SVC7H is SVT7H. Cam Assembly for SVC7WH is SVT7WH.)
2) Periodic lubrication is required at pin and working portion. (Take off oil from the teeth of pad and cam.)