

JIB CRANE (Equipped with a load sensor)

New series


Equipped with a load sensor (in exclusion of the simple type).

Common to all the models of Jib Cranes with universal-joint-type arms

JBC - S


The end arm (S7) has a load sensor built in.

When the rated load is exceeded, the alarm buzzer is sounded.

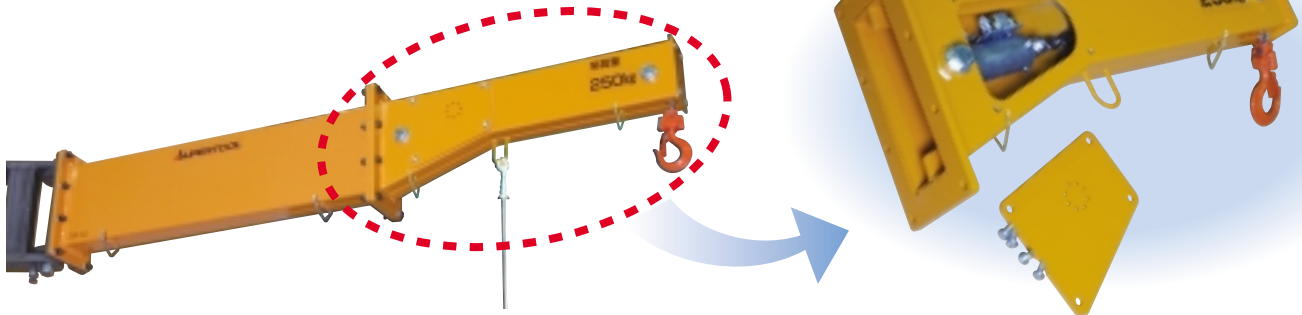




The dimensions of universal-joint-type arms (Common to all the models)

The length (S) is displayed for each model on the corresponding page.

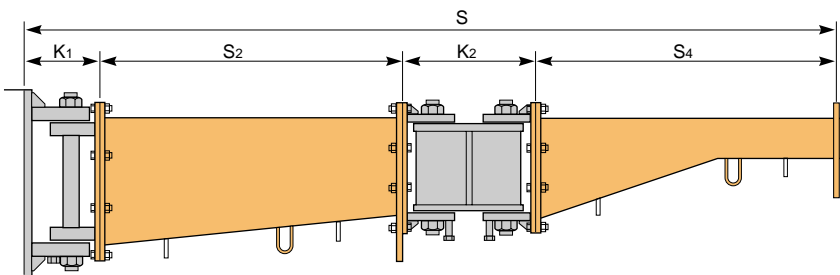

Arm with a load sensor

Replaceable with the arm (S4) of every other model

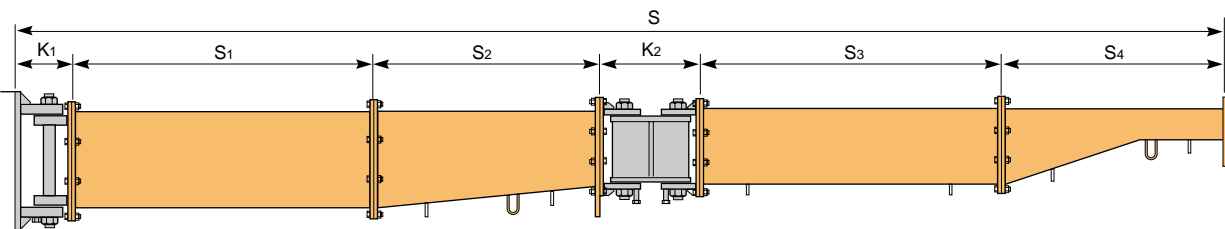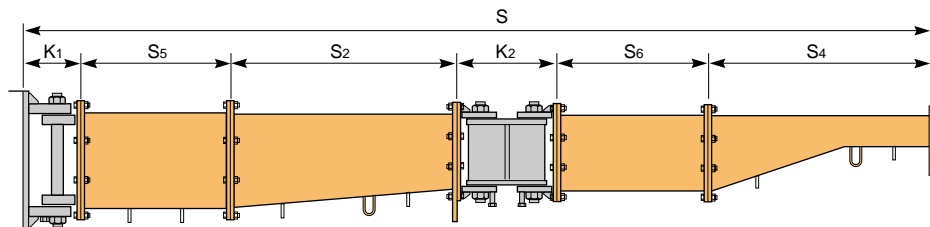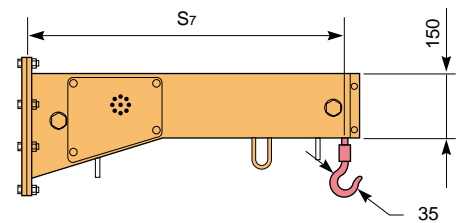

(Unit:mm)

SPECIFICATIONS • DIMENSIONS TABLE

(Unit:mm)

Item No.	Rated capacity (kg)	S1	S2	S3	S4	S5	S6	K2	S7
JBC1520	150	—	800	—	800	—	—	272	797
JBC1530		—	800	—	800	500	500	272	
JBC1540		1,000	800	1,000	800	—	—	272	
JBC2520	250	—	750	—	750	—	—	334	742
JBC2530		—	750	—	750	500	500	334	
JBC2540		1,000	750	1,000	750	—	—	334	
JBC4820	480	—	690	—	690	—	—	412	682
JBC4830		—	690	—	690	500	500	412	
JBC4840		1,000	690	1,000	690	—	—	412	

Item No.	K1
JBC150-K	115
JBC250-K	134
JBC480-K	166
JBC150-H	162
JBC250-H	190
JBC480-H	230
JBC150HF	171
JBC250HF	202
JBC480HF	246
JBC150-HC	171
JBC250-HC	202