



Screw Cam Clamp

**(Dual purpose of lifting and fixing as an anchor point)
(Universal Shackle Type)**

SUC

Operation Manual

This operation manual explains the basic operation and handling of the clamps. Please read this manual carefully before use and observe the precautions for safe operation.

SUPER TOOL CO., LTD.




brand lifting clamps are energy-saving lifting equipment which have been developed for the purpose of transporting steel materials.

Proper use

Operate lifting clamps after carefully reading and understanding this instruction manual for enhancing efficiency and safety of operation.

Prime efficiency and economy

Advanced functions, reasonableness and versatile applications of finely and carefully designed  lifting clamps ensure prime efficiency and economy.

Special considerations on safety

We conduct a pulling test with a load three times (or twice) of rated capacity and a manufacturing serial number is marked on each product, thus directing a special attention to safety.

Precautions for safety operation

(Pages 1~10 are common to all lifting clamp models)

Be sure to read this instruction manual carefully before use.

Mistaken use of lifting clamp may cause a danger such as dropping of load.

Education of “crane safety regulations,” “operation manual for lifting clamp,” “your company’s operation standards,” etc. should be given before actual operation not only to business owners who have purchased clamps but also to their operators to ensure that actual operators have acquired enough knowledge, safety information, and precautions of the clamps.

Safety precautions are divided into two classifications in this manual; “Warning” and “Caution,”.




WARNING:

Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.





CAUTION:

Indicates a potentially hazardous situation which, if not avoided, could result in medium damage or slight injury, or could result in property damage.


While only mentioned in  CAUTION, failure to comply with them still may lead to a serious disaster. As such, do not fail to pay attention both to WARNING and CAUTION which are of great importance.

Meanings of Signs

The signs of  and  indicate that precautions should be taken.

The contents of warning or caution are described at each sign.




The sign of  indicates prohibited actions.

The sign of  indicates that an action is enforced or instructed.







Two point lift for  righthand figure.

※ After reading this manual, make sure to keep it at a place of easy access by any users.







1. Handling in general

 WARNING	
<ul style="list-style-type: none"> ● Do not operate until the contents of the operation manual, and caution tag/plate are thoroughly read and understood. ● Do not operate without a legal qualification. ● Be sure to clear of the area of the operation for lifting or turning a load against possible drop off or fall over. ● Do not use for other than intended purpose. 	 Prohibited
<ul style="list-style-type: none"> ● Make sure to execute an inspection periodically and before each operation. 	 Instructed



2. Check before operation





 WARNING	
<ul style="list-style-type: none"> ● Do not use clamp unsuitable for the operation method. ● Do not use clamp of an abnormal condition; deformed, cracked, worn, malfunctioning, etc. ● If the load is under the following conditions, do not use clamp. (A material of fragile, high-hardness, low-hardness or extremely low-hardness, or a member with the gripping part tapered down more than 8°) 	 Prohibited
<ul style="list-style-type: none"> ● Check the type, rated capacity, clamp range, and “periodic inspection completed” label displayed on clamp body. ● The load to be lifted shall be within an allowable range of rated capacity of clamp. ● Thickness of load shall be within designated clamping range. 	 Instructed
 CAUTION	
<ul style="list-style-type: none"> ● Do not use clamp for the load under the following conditions. (Load to be lifted is more than 150°C, or in an atmosphere or solution of acid or alkaline chemicals less than minus 20°C) 	 Prohibited
<ul style="list-style-type: none"> ● Sling to be used for the clamp shall be an appropriate one for lifting operation. 	 Instructed

3. Lifting operation






 WARNING	
<ul style="list-style-type: none"> ● Do not use clamp, lifting at one point. (excluding special or custom ordered products) ● Do not use the clamp in the following ways of lifting: lifting of two or more individual objects at one time. (overlapped loads, padded load etc. , or side gripping) ● Do not use the clamp for pulling out steel plate sheet from the steel sheet pile or for vertical lifting of the sheet. ● Do not use the clamp when strong wind may threaten to cause any danger. ● Do not use the clamp for a hydraulic shovel. 	 Prohibited
<ul style="list-style-type: none"> ● Install two or more clamps in a balanced way to keep the balance of load. 	 Two point lift
<ul style="list-style-type: none"> ● The lifting angle of the clamps and the dividing angle should be kept within the allowable angles according to types. Load should be inserted to the innermost end of the jaw opening. ● When you use the clamp with a lock mechanism, never fail to have the lock engaged. 	 Instructed
 CAUTION	
<ul style="list-style-type: none"> ● If oil, paint, scale, rust, etc. are on the gripping pad, do not use the clamp. ● Do not drop clamp or drag on the ground. 	 Prohibited

4. Operation of a crane

 WARNING	
<ul style="list-style-type: none"> ● Never lift a load exceeding the rated capacity. ● Do not operate a crane in such a way as to give an impact to the load or the clamp. ● Do not allow a person to stand on the load or to carry him. ● Do not lift a load which is not free from any other objects. ● Do not release the lock of clamp while lifting load. ● Avoid unintended contact by load to an adjacent member or to the clamp, which has been removed from the load. 	 Prohibited

<ul style="list-style-type: none"> ● Stop the lifting operation by crane for a moment when the load is applied to the lifting ring for safety checking. (depth of the load into the clamp opening; status of locking). ● Stop the operation of the crane just before the load reaches the ground, and check the following matters: (Inclination or falling over of the load and security around the landing area of the load) 	 Instructed
 CAUTION	
<ul style="list-style-type: none"> ● Do not operate the crane in such a way as to drag the load along the ground. ● Do not leave the crane (or winder, etc.) unattended from an operating position while keeping the load lifted with the clamp. 	 Prohibited
<ul style="list-style-type: none"> ● Raising and lowering operation by crane should be done slowly and carefully. 	 Instructed

5. Maintenance, storage and alteration


 WARNING	
<ul style="list-style-type: none"> ● Never alter the clamp and its accessories. ● Do not apply welding or heat to the clamp or its accessories. ● Do not use any other parts than our company's genuine parts. ● Clamps which require the repair should be stored at a different place so that they are not used mistakenly. 	 Prohibited
<ul style="list-style-type: none"> ● Persons with specialized knowledge designated by the business owner are to conduct maintenance and repairing work. ● When any abnormality with the clamp is found, do not use it and immediately repair or dispose. ● Remove, if any, paint or mud sticking to the moving parts of the clamp, cams, and pads. 	 Instructed
 CAUTION	
<ul style="list-style-type: none"> ● Conduct maintenance and repairing without any load attached. ● Conduct maintenance and repairing after posting a sign indicating that you're on the maintenance work. ● Never fail to lubricate oil on the rotating parts of the clamp (around the pins), guide grooves, sliding parts, etc. ● Be sure to store clamps indoor. 	 Instructed

■ General warning for use (common to all lifting clamp models)

1. Be sure to select proper model clamps for use.


Pay special attentions to keep the lifting direction (rope angle).

2. Confirm the weight of the load. Do not exceed maximum capacity (designated ton) on clamps. (Never overload.)
3. Before use, confirm followings:
 - (a) Proper capacity of clamps.
 - (b) No abnormal movements of clamp or loosening of any bolts.
 - (c) No oil or other foreign matters on the surface of the cam and pad.
4. **Never use for load beyond the clamp range.**
5. When installing clamps, insert a lifting load completely until it comes in contact with the deepest of the jaw opening of main body.
6. **Depending on the model or capacity of the clamp, the cam teeth may not bite a load sufficiently when the load is a hard or light weight material (Less than 1/5 of maximum capacity or less than 1/4 of maximum clamp range). Confirm the condition of clamp for safety.**
7. Confirm that the safety lock is completely engaged in case clamp has a built-in lock.
8. Confirm that the load is well balanced. Determine the clamp position or the center of gravity of the rope properly. It is especially important to determine the horizontal center of gravity.
9. When lifting at 2 points, be sure to use two wire ropes, and make them equal length. (Fig. A)

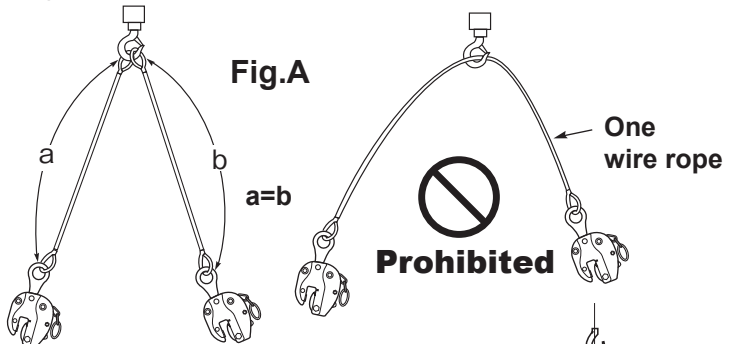

10. When lifting at 2 points, keep the lifting angle within 60°. (Fig. B)

(Follow the standards if lifting angle is specified depending on items.) If the load is long, use a balance.

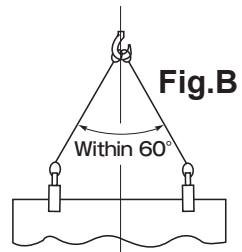

11. Never lift two or more steel plates or steel members at a time.
12. The load may move to an unexpected direction when lifted off the ground and as such confirm the center of gravity and the clamping position for safety when raising. Sufficient caution should be taken until the clamp with the load becomes completely balanced.
13. When changing directions of the load or any similar operations, all personnel must be clear of the area of operation. (Fig. C)

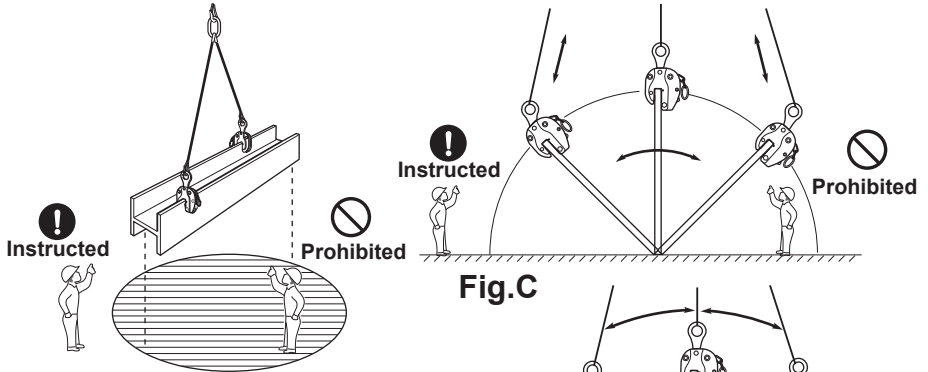


Fig.C

14. Do not ride on the lifting load.
Never use clamp for riding or carrying person.
15. Keep momentary inverting angle of a steel plate within 30°. (Fig. D)

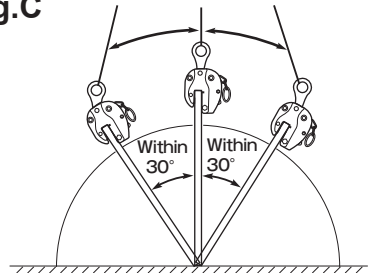


Fig.D

16. **Before operation, the surface of load must always be clean and free of scale, coatings or other foreign matters that will reduce clamping force significantly.**
17. **When raising, special attention must be given to prevent the rope from loosening by its unintended contact with any other objects.**
18. When raising again after the load is put on ground, reconfirm the clamp condition.
19. Do not use clamp for heated load or in a corrosion liquid because safety factor and durability will be reduced in such conditions.
20. Do not alter clamp by welding, cutting by gas or by any other modification.
21. Do not weld electrically a load while being lifted by clamp.
22. Conduct daily maintenance and lubrication.

■ Maintenance and Inspection

1. Maintenance

Daily maintenance is important for efficient and safe operation even under the severe use condition and for such purposes, please comply with the followings.

- (1) Designate the use standards and control.
- (2) Keep clamps indoor and do not leave them outdoor.
- (3) Check the followings to maintain in a good condition.
 - (a) Operating condition.
 - (b) Any abrasion, damage, or clogging at teeth of cam and pad.
 - (c) Deformation of main body - at jaw opening in particular.
- (4) Separate conforming clamps and other hazardous items identified during use or inspection and designate the defective sections. Perform maintenance any soon.
- (5) For the storage, place soft material as wooden chip in-between cam and pad to protect the teeth.
- (6) Perform inspection and maintenance once a week by referring to "Inspection Standards". Lubricate sliding sections periodically. (However, remove oil at teeth of cam and pad.)

2. Periodic Inspection

Perform periodic inspection in accordance with the periodic inspection and maintenance standards. Functions and life of clamps may differ in a great degree as they are used in varieties of fields under different conditions of use. Therefore, preparation and practice of effective handling/inspection standards manual by users themselves are recommended. We ask you to establish complete maintenance and control for assurance of safety in reference to our Manufacturer's Inspection Standards of our clamp. Clamp is designed for easy replacement of parts and therefore, do not fail to replace defective parts. Also, keeping spare parts at all times is recommended. For your preparation of the standards, pay special attention to the followings.

- (1) Operation and maintenance standards
 - (a) Preparation of use criteria (shape of load and operating methods).
 - (b) Thorough understanding and compliance of cautions on handling.
 - (c) Maintenance and storage.
 - (d) Rules of inspection and check at site.

- (2) Standards on periodic inspection
 - (A) Establishing dates of periodic inspection.
 - (B) Establishing inspection and maintenance methods.
 - (a) Inspecting period.
 - (b) Person in charge of the inspection.
 - (c) Inspection site.
 - (d) Tools and devices for inspection.
 - (e) Establishment of permissible limit of use.
 - (f) Explicit designation of maintenance and repair methods.

3. Manufacturer's inspection method

Our company's inspection procedures are as follow.

Check for


- (1) Movements.
- (2) Wear, loss, and/or clogging of/at the teeth of the cam and screw.
- (3) Deformation of main body.
- (4) Deformation of shackle.
- (5) The status of bolts, pins, links and springs.
- (6) Deep scratches in general.
- (7) Other checking items based on the Standards.

Lifting angle and rated load of wire rope

The maximum rated capacity of wire ropes also differs according to the lifting angle. Therefore, after paying attention to the lifting angle, always use wire ropes with the appropriate diameter.

Correlation table between the lifting angle and the applicable load for wire rope (for 2-point lifting)

■ JIS G 3525 6×24 A type

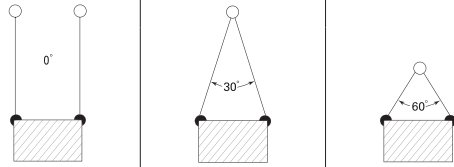D wire rope diameter (mm)	W rated load (for 1 single rope) [Safety factor S=6] (ton)			
		(Change in % of the lifting capacity rate according to the lifting angle)		
		100%	96%	86%
Maximum allowable load (rated load) for 2 wire ropes (ton)				
6	0.30	0.60	0.57	0.51
8	0.53	1.07	1.03	0.92
9	0.67	1.35	1.30	1.16
10	0.83	1.67	1.61	1.44
12	1.20	2.41	2.32	2.08
14	1.64	3.28	3.15	2.83
16	2.14	4.28	4.12	3.69
18	2.72	5.44	5.23	4.69
20	3.35	6.70	6.44	5.77
22	4.06	8.12	7.81	7.00
24	4.82	9.65	9.28	8.32
26	5.66	11.3	10.8	9.76
28	6.58	13.1	12.6	11.3
30	7.55	15.1	14.5	13.0
32	8.58	17.1	16.5	14.8
36	10.8	21.7	20.8	18.7
40	13.4	26.8	25.8	23.1

Calculation formula of a wire rope diameter and rated load (for 1 single rope)

* Refer to the calculated values as rough indications.

① $D = \sqrt{W \times C}$

② $W = \frac{D^2}{C}$

D= wire rope dia. (mm)
W= rated load (ton)
C= 120 (constant)
(with Safety factor S = 6)

★ When looking for the required wire rope diameter to lift a 3 ton load

① $D = \sqrt{W \times C}$

$D = \sqrt{3 \times 120} = \sqrt{360} = 19 \rightarrow$

20mm

★ When looking for the maximum capacity (rated load) of a wire rope with 12mm diameter

② $W = \frac{D^2}{C}$

$W = \frac{12^2}{120} = \frac{144}{120} = 1.2 \rightarrow$

1.2ton



Screw Cam Clamp

(Dual purpose of lifting and fixing as an anchor point)

(Universal Shackle Type)

SUC

Operation Manual and Inspection Standards



Screw Cam Clamp

(Dual purpose of lifting and fixing as an anchor point)

(Universal Shackle Type)

SUC

■ Uses

Clamps suitable for lifting, lateral pulling, and turning over steel plates and members in various shapes in such industries as civil engineering, construction, iron and steel, shipbuilding, and steel plate working industries.

It is also ideal for hanging chain blocks, hoists, etc., and pulling of steel materials, etc., as an anchor point.


■ Features

1. Because of its Shackle design of 360 degrees rotation to the lifting (pulling) direction, a stable angle lifting and a wide range of pulling are possible.
2. Screw and Spherical Based Cam ensure reliable clamping.
3. When the lateral load is applied, Spherical Based Cam tilts and clamps more firmly in proportion to the lifting load.
4. Spherical Based Cam is designed whereby Spring forces always make it return to the normal position.
5. Main body is a mold forged product of special alloy steel processed with optimal heat treatment, and thus, strong and durable.

■ Specifications

Item No.	Rated Capacity (ton)	Clamp Range (mm)	Net Weight (kg)
SUC 0.5	0.5	0~25	2.4
SUC 1	1	0~30	3.0
SUC 1.6	1.6	0~30	3.7
SUC 3.2	3.2	0~40	6.0

REPLACEMENT PARTS AND ASSEMBLIES

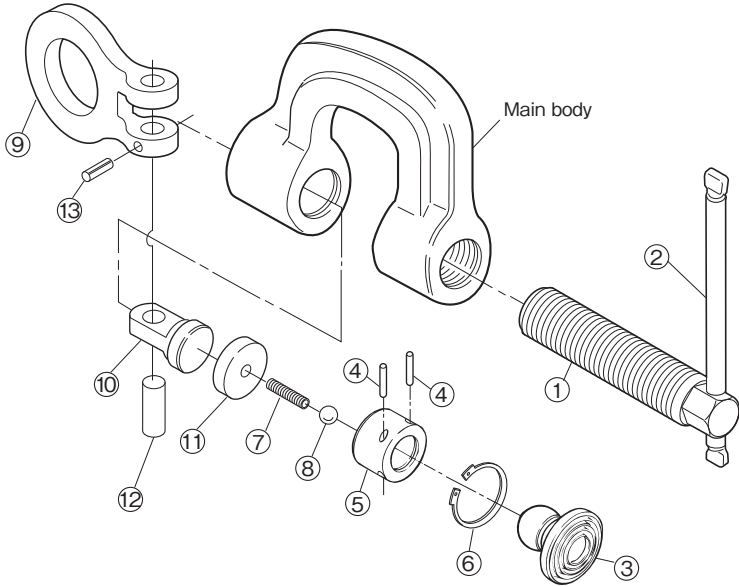

Part No.	Part Name		Assembly No. (Set No.)	Q'ty(pc)
	Part Name	Assembly Name		
1	Screw	Screw	SUCR	1
2	Handle			1
3	Spherical Based Cam	Cam	SUT	1
4	Stopper Pin			2
5	Cam Holder			1
6	Stop Ring			1
7	Spring			1
8	Steel Ball			1
9	Shackle			Shackle
10	Shaft	1		
11	Plate	1		
12	Connecting Pin	1		
13	Spring Pin	1		

1)When ordering, specify the rated capacity (ton) of item No.



(For instance, Cam for SUC3.2 is SUT3.2.)

2)Periodic lubrication is required at the sliding section of Cam Holder and Screw.

■ How to use

1. OPERATION METHOD


- 1) Screw tightens when turned clockwise, and loosens when turned counterclockwise (Right screw).
- 2) When installing clamps, insert a lifting load completely until it comes in contact with the deepest of the jaw opening of Main Body and set in a manner that the entire circumferential teeth of inner portion of concentric rings touch the surface of the load.
- 3) Spherical Based Cam retreats about 3mm when Screw is tightened. Tighten further until the force exceeds 25N.m (about 250kgf. cm)
- 4) During lifting operation and the like, special attention must be given to prevent Screw from loosening by an unintended contact of Handle with wire rope or any other objects.

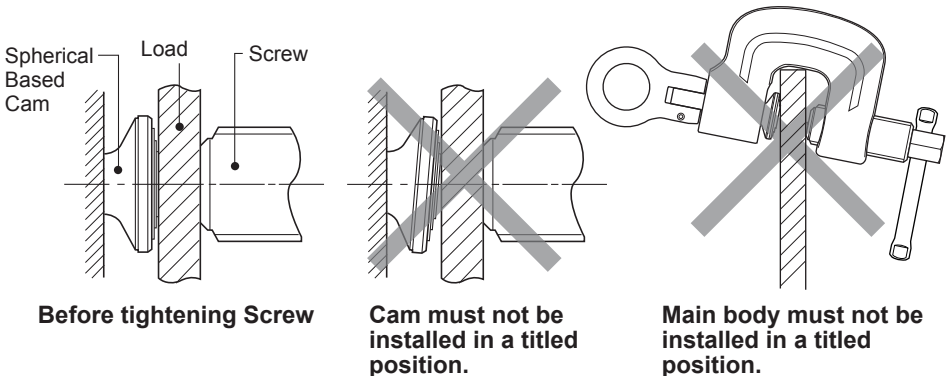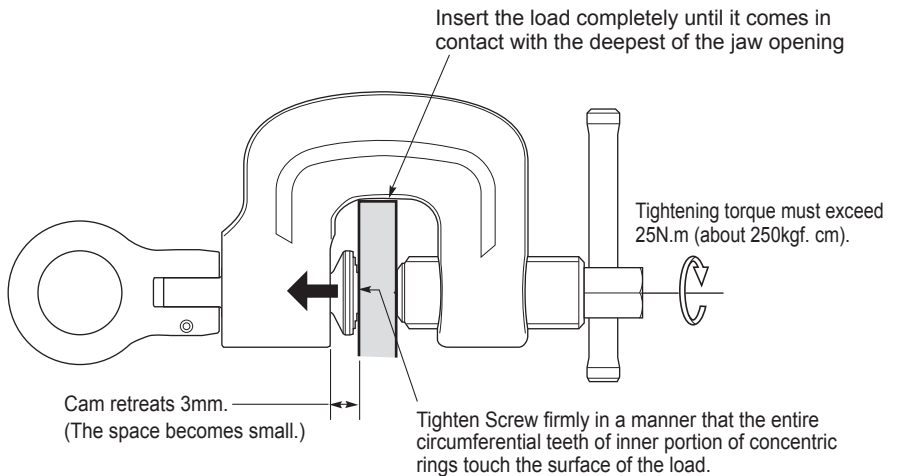

2. OPERATION PATTERNS


① Lifting Operation (Always lift at 2 or more points)

(1) When lifting at 2 points, keep the lifting angle within 60°.

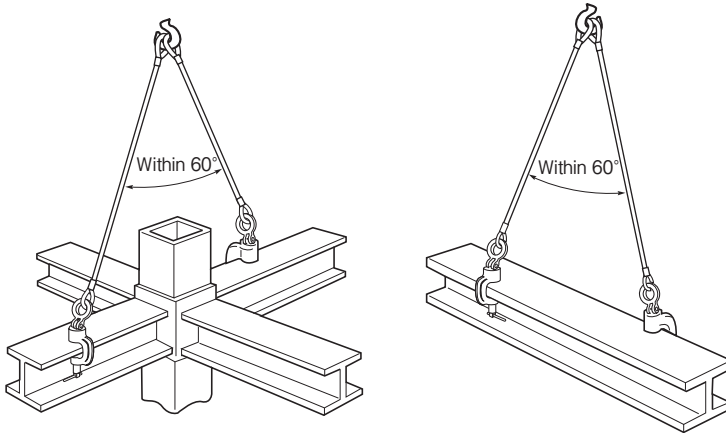


(2) Always lift at 3 or more points with complicated shaped objects, and balance the load with the proper clamping position and length of wire rope.

Keep the lifting angle of the wire ropes next to each other within 60°. (When lifting steel plates horizontally, always lift at 4 points.)

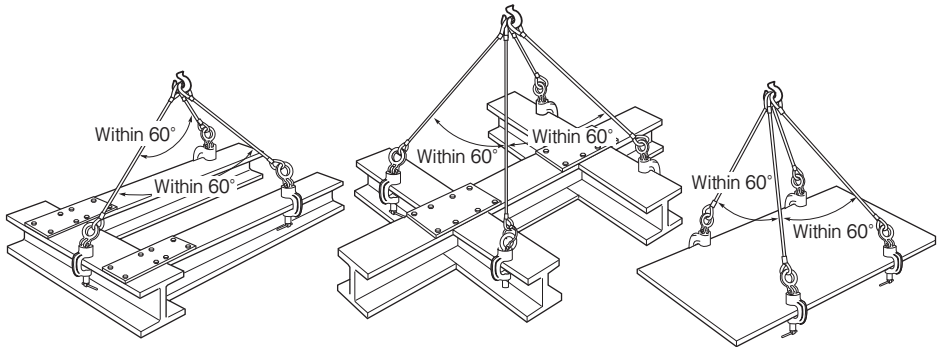


(3) Clamps can also be used for temporary turning over mold steel or the like.

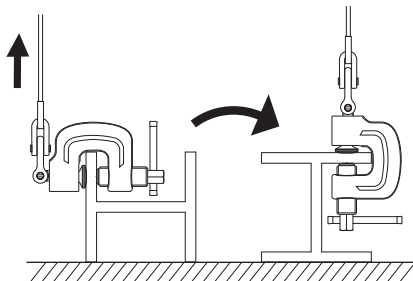


② Hanging Operation


(1) Load direction for hanging hoist and chain block should be within 30°.

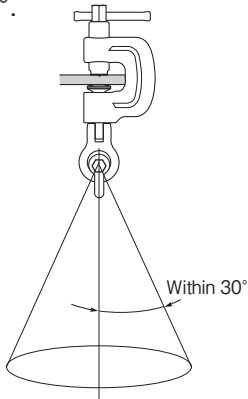

(2) When hanging hoist and chain block, attach U Shackle with shackle hole.

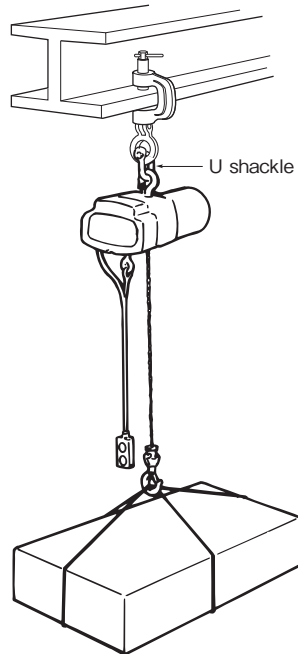

(3) When hanging from two different pillars.

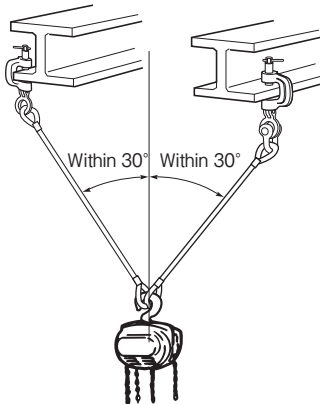


- ※1 In the case of hanging, it cannot be used for sloped objects (I-beams).
- ※2 When the clamps are used continuously over a long period of time, check the clamping force regularly at short intervals.



③ **Clamps can also be used for positioning steel structure for welding, pulling and/or suspending.**

(When the clamps are used continuously over a long period of time, pay special attention not to overload.)

(1) Keep the pulling direction of shackle within the range shown below.

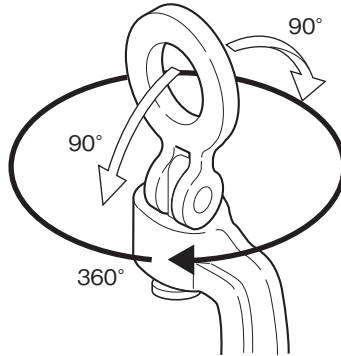


(2) Examples of pulling operation.

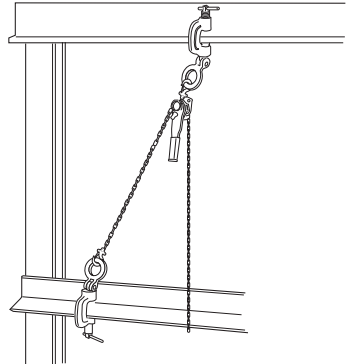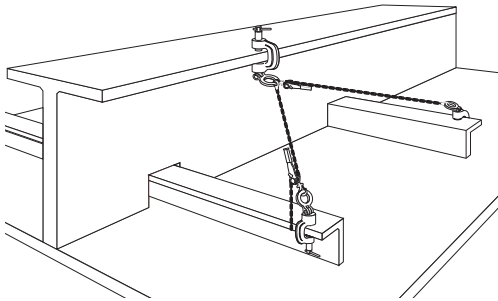

④ **The clamps cannot be used on the following shaped structures.**

※Wedge shapes over 8°

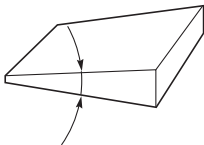


Round bars




Curve shapes with radius under 300mm



Object with uneven surface (no flat surfaces) at grips.



Cylinders with inner dia. under 600mm




※Even in the case the wedge shapes under 8°, lifting up in tapering down direction is prohibited.

3. DISASSEMBLING AND ASSEMBLING

① Disassembling


- (1) Turn Screw counterclockwise to pull it out of Main Body.
(Screw and Handle cannot be disassembled.)
- (2) Tilt Spherical Based Cam as shown in the figure on the right. Remove Stop Ring by using snap ring pliers for holes to pull out Cam Holder, Steel Ball, Spring and Plate from Main Body. (Fig. 1)
- (3) Pull out two Stopper Pins from Cam holder, and remove Spherical Based Cam and Stop Ring. (Fig. 2)
- (4) Pull out Spring Pin for shackle by using a pin punch etc.
Remove the connecting pin, and pull out Shaft from Main Body.

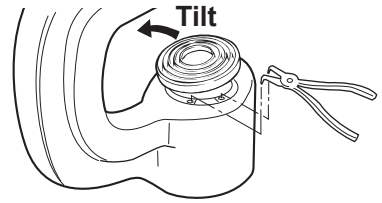

(Fig.1)

② Assembling

- (1) Insert Shaft into Cam Holder hole of Main Body.
Align Pin hole of Shackle with Pin hole of Shaft, connect Shaft with Pin hole, and hit Spring Pin by using a hammer etc. (Procedure opposite to how to disassemble (4))
- (2) Temporarily assemble Stop Ring at the neck of Spherical Based Cam.
- (3) Place the spherical part of Spherical Based Cam in Cam Holder and fix it with two Stopper Pins.
- (4) Place Plate in Cam Holder, and Spring and Steel Ball in order in the hole of Plate.
- (5) Put Spherical Based Cam and Cam Holder of (3) into the hole of Main Body. At this time, set Steel Ball of (4) in a manner that it enters the hole at the bottom of Cam holder.
- (6) Fix Stop Ring of (2) to the groove of Main Body by using snap ring pliers for holes.
- (7) Insert and turn Screw into the screw part of Main Body.

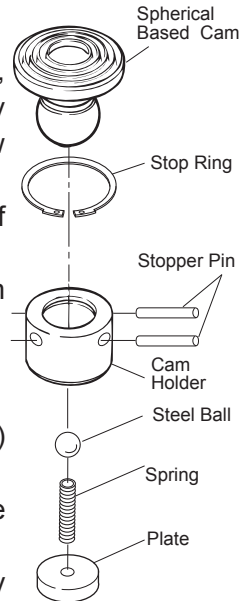

(Fig.2)

■ CAUTION:

- ◆ Use within the rated capacity.
- ◆ Use within the clamp range.
- ◆ Do not use for any objects other than steel materials.
- ◆ Do not use for hard (30 HRC or higher) load.
- ◆ Lifting is not allowed for a load tapering down in upward direction.
- ◆ Do not apply shock to the load or lifting clamp.
- ◆ Do not lift more than one plate.
- ◆ Before using the product, be sure to check for clogging and wear of the teeth of the cam, screw and any other parts.
- ◆ Do not alter. Heating, modifying, etc. will significantly reduce the quality (strength).

■ OTHER:




- ◆ Inquiries for Repair Parts and Repair.
If repair parts or repairs are required, stop using this clamp and contact your distributor.






■ DAILY INSPECTION:







Conduct daily checks and maintenance to prevent the loss of safety and efficiency.


1. Check that there are no cracks at the body, cam, or wire rope holes.
2. Check if the movement and lubrication condition of each part are good.
3. Check for wear, loss, or clogging of the teeth of the cam and screw.
4. Refer to other inspection standards.

INSPECTION STANDARDS FOR SUC

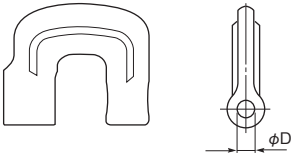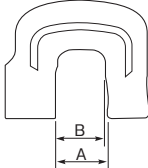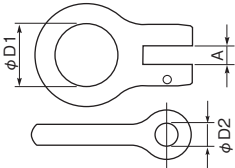Item	Inspection method	Limit of use	Remedy																				
<h2>Main Body</h2>	<p>Visually check or use color dyes to find cracks.</p> <p>Check for wear or deformation of holes of screw.</p> <p>Measure the jaw opening.</p>	<p>When found visually.</p> <p>When the diameter of any one part of circumference of any hole exceeds the respective size in the table below.</p>  <table border="1" data-bbox="512 539 934 596"> <thead> <tr> <th>Rated capacity (ton)</th> <th>0.5</th> <th>1</th> <th>1.6</th> <th>3.2</th> </tr> </thead> <tbody> <tr> <td>D (mm)</td> <td>27.5</td> <td>27.5</td> <td>27.5</td> <td>32.3</td> </tr> </tbody> </table> <p>When the difference of "A" and "B" exceeds 5%. (5mm or more against 100mm in depth)</p>  <p>When the displacement of the center of Srew and pad exceeds 2 mm.</p>	Rated capacity (ton)	0.5	1	1.6	3.2	D (mm)	27.5	27.5	27.5	32.3	<p>Discard</p>										
Rated capacity (ton)	0.5	1	1.6	3.2																			
D (mm)	27.5	27.5	27.5	32.3																			
<h2>Shackle</h2>	<p>Visually check or use color dyes to find cracks.</p> <p>Visually check or measure wear or deformation of Shackle hole and Pin hole.</p>	<p>When found visually.</p> <p>When the diameter of any one part of circumference of any hole exceeds the respective size in the table below.</p> <p>When the difference (A), exceeds the size in the table below.</p>  <table border="1" data-bbox="516 1347 930 1458"> <thead> <tr> <th>Rated capacity (ton)</th> <th>0.5</th> <th>1</th> <th>1.6</th> <th>3.2</th> </tr> </thead> <tbody> <tr> <td>D1 (mm)</td> <td>35.5</td> <td>35.5</td> <td>45.5</td> <td>50.5</td> </tr> <tr> <td>D2 (mm)</td> <td>12.5</td> <td>12.5</td> <td>14.5</td> <td>16.5</td> </tr> <tr> <td>A (mm)</td> <td>13.0</td> <td>13.0</td> <td>18.0</td> <td>22.0</td> </tr> </tbody> </table>	Rated capacity (ton)	0.5	1	1.6	3.2	D1 (mm)	35.5	35.5	45.5	50.5	D2 (mm)	12.5	12.5	14.5	16.5	A (mm)	13.0	13.0	18.0	22.0	<p>Replace</p>
Rated capacity (ton)	0.5	1	1.6	3.2																			
D1 (mm)	35.5	35.5	45.5	50.5																			
D2 (mm)	12.5	12.5	14.5	16.5																			
A (mm)	13.0	13.0	18.0	22.0																			

Item	Inspection method	Limit of use	Remedy																		
Screw	Visually check or use color dyes to find cracks.	When found visually.	Replace																		
	Visually check for bending.	When the movement is not smooth, or when the displacement of the screw center exceeds 2mm.																			
	Visually check for wear or damage.	When thread part on circumference exceeds the respective size in the below table. <table border="1" data-bbox="479 373 893 427"> <tr> <td>Rated capacity (ton)</td> <td>0.5</td> <td>1</td> <td>1.6</td> <td>3.2</td> </tr> <tr> <td>Diameter (mm)</td> <td>29.2</td> <td>29.2</td> <td>29.2</td> <td>34.0</td> </tr> </table>		Rated capacity (ton)	0.5	1	1.6	3.2	Diameter (mm)	29.2	29.2	29.2	34.0								
	Rated capacity (ton)	0.5		1	1.6	3.2															
	Diameter (mm)	29.2		29.2	29.2	34.0															
	Visually check or measure the degree of wear.	When the degree of wear exceeds 0.5mm. 																			
Visually check or use color dyes to find cracks at the teeth bottom.	When found Visually. 																				
Visually check for broken teeth.	When any broken tooth is found. 																				
Shaft	Visually check or use color dyes to find cracks. Measure each section for wear.	When found visually. When the width (A) and outside diameter (D1) becomes less than the respective size in the table below. When the pin hole (D2), even one part of circumference, exceeds the respective size in the table below. 	Replace																		
	Measure for deformation.	<table border="1" data-bbox="479 1177 885 1289"> <tr> <td>Rated capacity (ton)</td> <td>0.5</td> <td>1</td> <td>1.6</td> <td>3.2</td> </tr> <tr> <td>D1 (mm)</td> <td>19.5</td> <td>19.5</td> <td>23.5</td> <td>27.5</td> </tr> <tr> <td>D2 (mm)</td> <td>12.5</td> <td>12.5</td> <td>14.5</td> <td>16.5</td> </tr> <tr> <td>A (mm)</td> <td>11.5</td> <td>11.5</td> <td>16.5</td> <td>20.5</td> </tr> </table> When the distortion exceeds 0.5mm, and the rotation is not smooth when assembled into Main Body. 		Rated capacity (ton)	0.5	1	1.6	3.2	D1 (mm)	19.5	19.5	23.5	27.5	D2 (mm)	12.5	12.5	14.5	16.5	A (mm)	11.5	11.5
Rated capacity (ton)	0.5	1	1.6	3.2																	
D1 (mm)	19.5	19.5	23.5	27.5																	
D2 (mm)	12.5	12.5	14.5	16.5																	
A (mm)	11.5	11.5	16.5	20.5																	

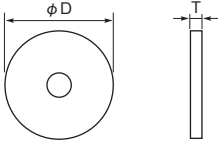Item	Inspection method	Limit of use	Remedy															
Plate	Measure each section for wear.	When the width (T) and outside diameter (D) becomes less than the size in the table below. <div style="text-align: center;">  </div> <table border="1" data-bbox="512 373 932 456"> <tr> <td>Rated capacity (ton)</td> <td>0.5</td> <td>1</td> <td>1.6</td> <td>3.2</td> </tr> <tr> <td>D (mm)</td> <td>31.5</td> <td>31.5</td> <td>35.5</td> <td>44.5</td> </tr> <tr> <td>T (mm)</td> <td>7.0</td> <td>7.0</td> <td>7.0</td> <td>8.5</td> </tr> </table>	Rated capacity (ton)	0.5	1	1.6	3.2	D (mm)	31.5	31.5	35.5	44.5	T (mm)	7.0	7.0	7.0	8.5	Replace
	Rated capacity (ton)	0.5	1	1.6	3.2													
D (mm)	31.5	31.5	35.5	44.5														
T (mm)	7.0	7.0	7.0	8.5														
Measure for deformation.	When the distortion exceeds 0.5mm. <div style="text-align: center;">  </div>																	
Connecting Pin	Measure the frame part for wear.	When the frame part, even one part of circumference, exceeds the size in the table below. <table border="1" data-bbox="512 671 932 727"> <tr> <td>Rated capacity (ton)</td> <td>0.5</td> <td>1</td> <td>1.6</td> <td>3.2</td> </tr> <tr> <td>Diameter (mm)</td> <td>11.5</td> <td>11.5</td> <td>13.5</td> <td>15.5</td> </tr> </table>	Rated capacity (ton)	0.5	1	1.6	3.2	Diameter (mm)	11.5	11.5	13.5	15.5	Replace					
	Rated capacity (ton)	0.5	1	1.6	3.2													
Diameter (mm)	11.5	11.5	13.5	15.5														
Visually check or measure deformation.	When the distortion exceeds 0.5mm. <div style="text-align: center;">  </div>																	
Spring	Visually check if cam returns automatically to an original position when moved by hands.	When the Cam does not return to its original position due to the loss of adequate repulsive power from deformation.	Replace															
	Visually check clearance of spring coils.	When Spring becomes shorter by more than 5% .																
Spherical Based Cam	Visually check and measure the degree of wear.	When the degree of wear exceeds 0.5mm. <div style="text-align: center;">  </div>	Replace															
	Visually check or use color dyes to find cracks at the bottom cam teeth.	When found Visually. <div style="text-align: center;">  </div>																
	Visually check for broken cam teeth.	When any broken tooth is found. <div style="text-align: center;">  </div>																

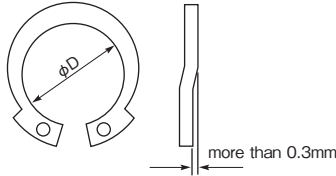Item	Inspection method	Limit of use	Remedy										
Cam Holder	Measure each section for wear.	When the space among Main body, Cam holder and Cam exceeds 0.5mm, resulting in rattling.	Replace										
Stop Ring	Measure for twist or deformation.	<p>When the hole diameter on circumference exceeds the respective size in the table below.</p> <p>When the twist exceeds 0.3mm.</p>  <table border="1" data-bbox="479 651 904 710"> <tr> <td>Rated capacity (ton)</td> <td>0.5</td> <td>1</td> <td>1.6</td> <td>3.2</td> </tr> <tr> <td>Diameter (mm)</td> <td>27.1</td> <td>27.1</td> <td>30.5</td> <td>38.6</td> </tr> </table>	Rated capacity (ton)	0.5	1	1.6	3.2	Diameter (mm)	27.1	27.1	30.5	38.6	Replace
Rated capacity (ton)	0.5	1	1.6	3.2									
Diameter (mm)	27.1	27.1	30.5	38.6									
Stopper Pin	Measure each section for wear. Visually check or measure for deformation.	<p>When the space with the hole of Cam Holder exceeds 0.2mm, resulting rattling.</p> <p>When deformation exceeds 0.2mm.</p> <p>When the movement of Spherical Based Cam is not smooth.</p>	Replace										
Steel Ball	Measure for wear, or deformation.	<p>When Ball diameter of any part becomes smaller than the respective size in the table below.</p> <table border="1" data-bbox="479 1093 904 1152"> <tr> <td>Rated capacity (ton)</td> <td>0.5</td> <td>1</td> <td>1.6</td> <td>3.2</td> </tr> <tr> <td>Diameter (mm)</td> <td>4.8</td> <td>4.8</td> <td>4.8</td> <td>5.8</td> </tr> </table> <p>When the movement of Spherical Based Cam is not smooth.</p>	Rated capacity (ton)	0.5	1	1.6	3.2	Diameter (mm)	4.8	4.8	4.8	5.8	Replace
Rated capacity (ton)	0.5	1	1.6	3.2									
Diameter (mm)	4.8	4.8	4.8	5.8									
Spring Pin	Visually check the installation condition of spring pin.	When damaged, loosed, or come off.	Replace										

